

Memory Stick® Media Compatibility Information for Sony® Digital Camcorders

Important Information:

- This "Compatibility Chart" only provides compatibility testing results for the Memory Stick media applications listed in each product's instruction manual with Memory Stick media types listed below.
- This chart does not guarantee support for all Memory Stick media types' performance nor compatibility among Memory Stick media compliant products.
- Memory Stick media transmission speed varies by, and depends on, host hardware devices' features and circumstances of use.
- Attach a dedicated adapter to use a Memory Stick Duo media in a slot for standard size media.
- The Memory Stick media capacity indicated on the packaging will differ from actual usable capacity. A portion of the memory is used for data management file functions. Refer to the back of the packaging for the minimum guaranteed capacity. [Click here to view the Memory Stick media user capacity chart.](#)
- This compatibility chart and specifications are subject to change without notice.

Notes:

2	The Transmission speed may not be faster when using Memory Stick PRO™ (High Speed/Mark2) and Memory Stick PRO-HG™.
4	A dedicated adapter must be attached to use the Memory Stick Micro™ media .
7	This Memory Stick™ may not be able to record or play video.
9	Use a Memory Stick™ 1GB or over when shooting video.
13	Use the AD-MSCF1 Memory Stick™ adaptor for Memory Stick Duo™ media.
18	The recording failure of sound may occur by pushing the DIVIDE button during recording.
20	The recording failure of sound may briefly occur while pre-recording buffer is activated.
37	This media is not compatible with HD movie mode.
39	TransferJet function is not available for use with this product.
41	This media cannot be used in "Standard mode" as file system is different.
42	This media cannot be used when Secure Access is set to ON. Please switch off Secure Access function, using the software Memory Media Utility.
43	Mirroring function is not available for use with this product.
44	This media is not compatible with simultaneous movie recording in Standard mode.
45	This media is not compatible with simultaneous movie recording.
53	This media is not compatible with XAVC S movie mode.

[illegible]

Camcorder	MS-A16G	MS-A16GU2	MS-A1G	MS-A1GN	MS-A1GU2	MS-A256	MS-A2G	MS-A2GN	MS-A2GU2	MS-A4G	MS-A4GN	MS-A4GU2	MS-A512	MS-A8G	MS-A8GN
FDR-AX100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX240	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX330	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX900	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ275	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ340	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ350	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ540	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ810	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX220	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX230	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX290	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX380	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX430V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ230	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ380	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ430V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ650V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ790V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-TD30V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX190	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX200	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX210	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX260V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX580V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-CX760V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-GW77V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ200	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ260V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ580V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ710V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-PJ760V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-TD20V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDR-XR260V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
DCR-SX45	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
DCR-SX65	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
DCR-SX85	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-CX130	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-CX160	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-CX360V	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-CX560V	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-CX700V	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-PJ10	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-PJ30V	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7
HDR-PJ50V	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7	OK *4*7

Memory Stick Media

[illegible]

[illegible][illegible]

Memory Stick Media

[illegible]

Memory Stick Media

Camcorder	MS-HX8AG	MS-HX8B	MS-HX8G	MS-JX8G	MS-M16	MS-M4	MS-M8	MS-MT16G	MS-MT1G	MS-MT2G	MS-MT32G	MS-MT4G	MS-MT8G	MS-PX16
FDR-AX100	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53
HDR-CX240	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-CX330	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-CX900	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53	OK *53
HDR-PJ275	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-PJ340	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-PJ350	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-PJ540	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-PJ810	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX220	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX230	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX290	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX380	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX430V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ230	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ380	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ430V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ650V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ790V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-TD30V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX190	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX200	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX210	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX260V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX580V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX760V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-GW77V	-	-	-	-	OK	OK	OK	-	-	-	-	-	-	-
HDR-PJ200	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ260V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ580V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ710V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ760V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-TD20V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR260V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX45	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX65	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX85	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX130	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX160	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX360V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX560V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX700V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ10	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ30V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-PJ50V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43

Memory Stick Media

Camcorder	MS-HX8AG	MS-HX8B	MS-HX8G	MS-JX8G	MS-M16	MS-M4	MS-M8	MS-MT16G	MS-MT1G	MS-MT2G	MS-MT32G	MS-MT4G	MS-MT8G	MS-PX16
HDR-TD10	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR160	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SR68	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SR88	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX43	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX44	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX63	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX83	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-AX2000	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX110	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX150	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX300	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX350V	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX550V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR150	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR350V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR550V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX500V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX520V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-DVD650	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-DVD850	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SR47	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SR67	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SR87	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX40	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX41	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
DCR-SX60	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-CX100	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-TG5V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR100	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR200V	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR500V	OK	OK	OK	OK *9	OK *4	OK *4	OK *4	OK	OK	OK	OK	OK	OK	OK *42*43
HDR-XR520V	OK	OK	OK	OK *9	OK *4*7	OK *4*7	OK *4*7	OK	OK	OK	OK	OK	OK	OK *42*43

	Memory Stick Media									
Camcorder	MS-PX32	MS-PX64	MSX-M1GS	MSX-M1GST	MSX-M256	MSX-M256S	MSX-M2GS	MSX-M4GS	MSX-M512S	MSX-M8GS
FDR-AX100	OK *53	OK *53	-	-	-	-	-	-	-	-
HDR-CX240	-	-	-	-	-	-	-	-	-	-
HDR-CX330	-	-	-	-	-	-	-	-	-	-
HDR-CX900	OK *53	OK *53	-	-	-	-	-	-	-	-
HDR-PJ275	-	-	-	-	-	-	-	-	-	-
HDR-PJ340	-	-	-	-	-	-	-	-	-	-
HDR-PJ350	-	-	-	-	-	-	-	-	-	-
HDR-PJ540	-	-	-	-	-	-	-	-	-	-
HDR-PJ810	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX220	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX230	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX290	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX380	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX430V	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-PJ230	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-PJ380	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-PJ430V	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-PJ650V	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-PJ790V	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-TD30V	OK *42*43	OK *42*43	-	-	-	-	-	-	-	-
HDR-CX190	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-CX200	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-CX210	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-CX260V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-CX580V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-CX760V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-GW77V	-	-	-	-	-	-	-	-	-	-
HDR-PJ200	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-PJ260V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-PJ580V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-PJ710V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-PJ760V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-TD20V	OK *42*43	-	-	-	-	-	-	-	-	-
HDR-XR260V	OK *42*43	-	-	-	-	-	-	-	-	-
DCR-SX45	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SX65	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SX85	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX130	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX160	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX360V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX560V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX700V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-PJ10	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-PJ30V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-PJ50V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK

Memory Stick Media

Camcorder	MS-PX32	MS-PX64	MSX-M1GS	MSX-M1GST	MSX-M256	MSX-M256S	MSX-M2GS	MSX-M4GS	MSX-M512S	MSX-M8GS
HDR-TD10	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR160	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SR68	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SR88	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
DCR-SX43	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
DCR-SX44	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
DCR-SX63	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
DCR-SX83	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
HDR-AX2000	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX110	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX150	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX300	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX350V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX550V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR150	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR350V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR550V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX500V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-CX520V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-DVD650	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-DVD850	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SR47	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SR67	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SR87	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SX40	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
DCR-SX41	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
DCR-SX60	OK *42*43	-	OK	OK	OK *7	OK *7	OK	OK	OK *7	OK
HDR-CX100	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-TG5V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR100	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR200V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR500V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK
HDR-XR520V	OK *42*43	-	OK	OK	OK *9	OK *9	OK	OK	OK *9	OK